





How to replace the rear wiper blades on Citroen C1 1 PM PN


VIDEO TUTORIAL


## Important!

This replacement procedure can be used for:
CITROËN C1 (PM_, PN_) 1.0

---

The steps may slightly vary depending on the car design.

# REQUIRED TOOLS:

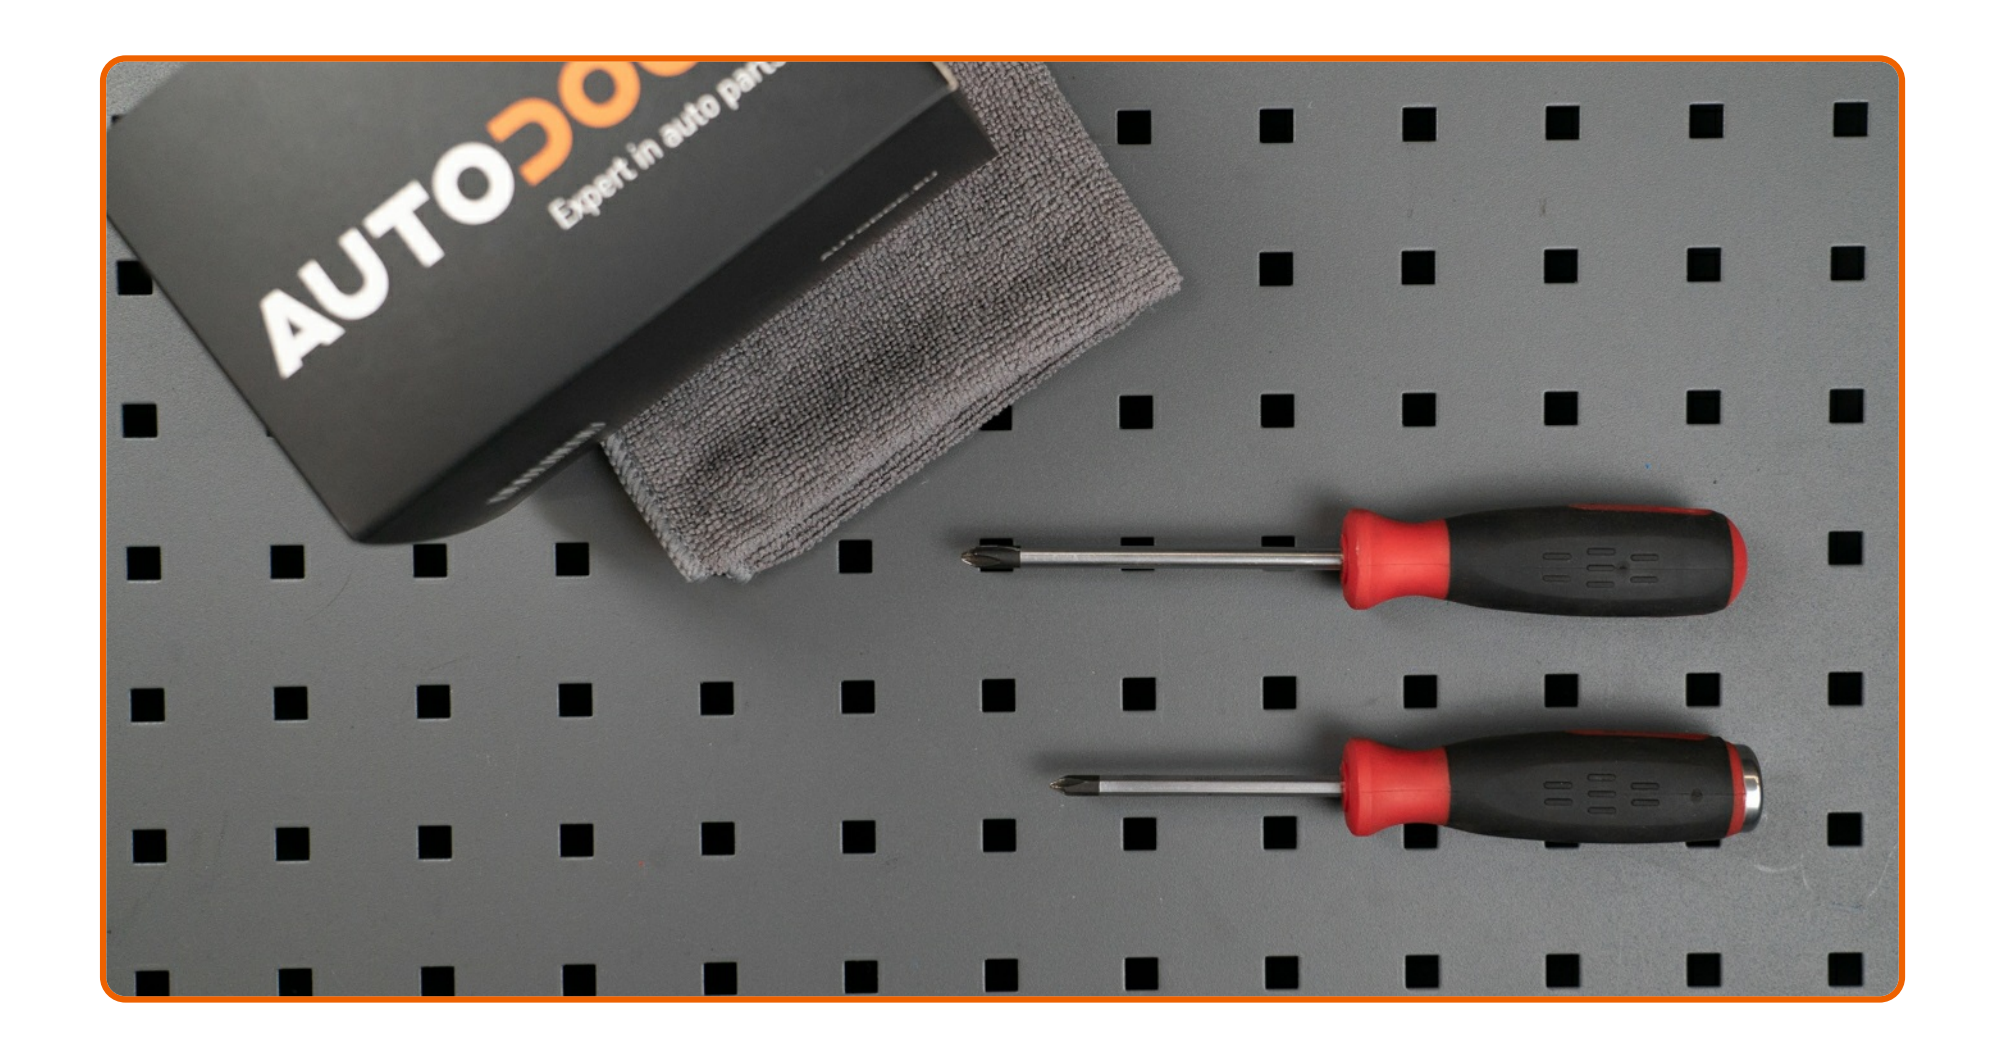


- Flat Screwdriver

## AUTODOC recommends:

- All work should be done with the engine stopped.

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1




Prepare the new windscreen wipers.

2



Pull the wiper arm away from the glass surface until it stops.

3



Press the clip. Use a flat screwdriver.

4



Remove the blade from the wiper arm.

## AUTODOC recommends:

- When replacing the wiper blade, take caution to prevent the spring-loaded wiper arm from hitting the glass.

5



Install the new wiper blade and carefully press the wiper arm down to the glass.


## AUTODOC recommends:

- Don't touch the wiper blade at the working rubber edge to prevent damage to the graphite coating.
- Ensure that the blade rubber strip fits tightly to the glass along the entire length.

6

Switch on the ignition.

7

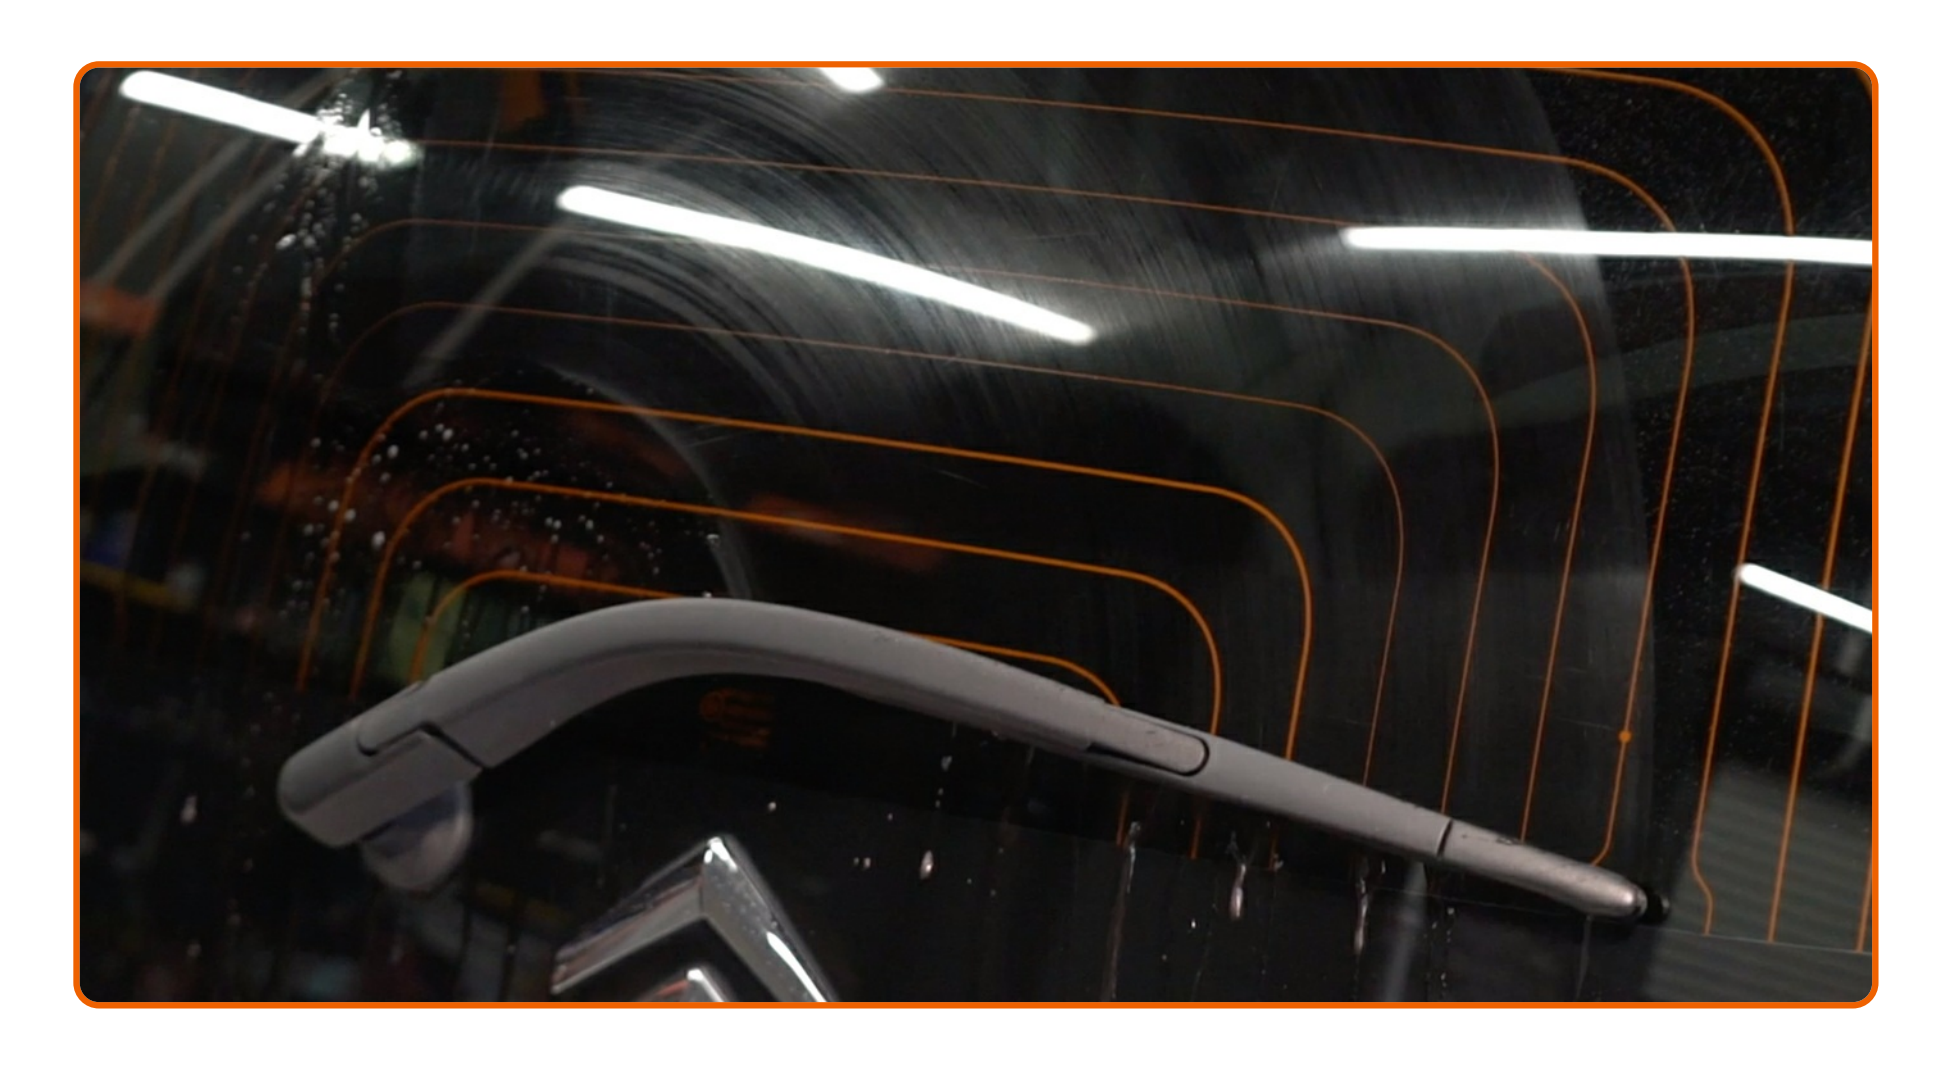

After installation check the wipers performance.

# DID YOU FIND THESE INSTRUCTIONS HELPFUL?

YES

NO



BECOME A MEMBER OF AUTODOC CLUB!

# AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING




A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR




BUY SPARE PARTS FOR CITROEN


WINDSCREEN WIPERS: A WIDE SELECTION


CHOOSE CAR PARTS FOR CITROEN C1 1 PM PN
C1


WINDSCREEN WIPERS FOR CITROEN: BUY NOW
CITROËN




## WINDSCREEN WIPERS FOR CITROEN C1 1 PM PN: THE BEST DEALS & OFFERS




# Disclaimer: